

Easy Whip Plus Best Practice & Trouble Shooting Suggestions

Best Practice for Usage:

1. Fill the Easy Whip canister with 2 cups of cold heavy whipping Cream*. When using a ½ Pint Whipper, use 1 cup of cold heavy whipping cream. Add flavoring to taste. Gently shake ingredients in whipper to combine.

*Not light cream or half and half.

2. Place a cream charger into the charger holder – piercing tip facing up.

3. Screw the charger holder with cream charger onto the whipper. You will hear a gas release sound when the charger is pierced, and the whipper bottle will feel colder.

4. Shake the device vigorously 4-6 times. Unscrew the charger holder and dispose of the empty charger. You will hear a slight hissing sound when you unscrew, this is normal. Push your tip/charger cover onto the head also covering the gas piercing pin.

TIP: Used iSi Cream chargers are 100% recyclable.

5. Dispense whipped cream canister in a top-down or head-first position. Push the button on the side of the head to dispense the cream.

TIP: If the whipped cream still has a soft consistency, shake again. Avoid over-shaking.

TIP: When using a whipper that has been stored overnight, give it 2-3 shakes to stir contents. Avoid over-shaking before use.



Trouble Shooting Suggestions:

Whipped Cream is too liquid - not holding its dollop shape

Not shaken enough

- ✓ **SOLUTION:** Shake the bottle filled with cream & gas 4 to 6 more times.

Not enough gas in the Cream Whipper

- ✓ **SOLUTION:** Always use original iSi Branded Cream Chargers.

Device was overfilled

- ✓ **SOLUTION:** Carefully mind the max filling line for all contents going into the whipper.

Whipped Cream was not properly chilled

- ✓ **SOLUTION:** Chill whipped cream before use, and keep chilled during use.

Check to ensure that the white Head gasket is in good condition and seated properly in the head.

- ✓ **SOLUTION:** If the head gasket is missing or damaged, the bottle will not seal properly and the gas will leak out of the whipper.

Poor Yield: too much whipped cream is left in the whipper after the gas is dispensed.

Always use the original iSi Cream Charger for accurate gas dispensing and safe operation.

Over shaking can cause “choppy” cream which is difficult for the gas to push out.

- ✓ **SOLUTION:** Use the recommended shaking process noted in step #5

Whipper was not dispensed in a top-down manner

- ✓ **SOLUTION:** Review Step #5 for the proper dispensing technique. Using the correct technique places the gas in the proper position to push the cream out of the whipper.



#0087 10-Pack



#0084 24-Pack



#0085 (50-Pack)

